




Bottle mount sizing sheet

Measure the distance between the outsides of the pads (Dimension B) on your current setup and identify the part number accordingly.

Bottle mount flex allows for approximately $\pm 5\text{mm}$ of tolerance for outer pad widths. Size down if measurement is midway between two sizes

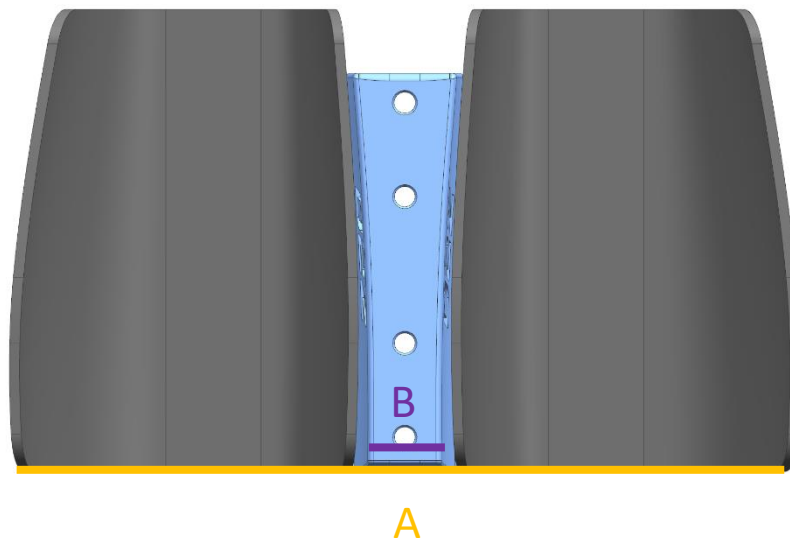

BTA Size	Dimension A mm (back outer pad width) – STANDARD ARM REST	Dimension A mm (back outer pad width) – LONG ARM REST	Dimension B mm (rear width of bottle mount)
001	230	205	20
003	240	215	30
005	250	225	40
007	260	235	50
009	270	245	60
011	280	255	70