




Chain Catcher Fitting Instructions

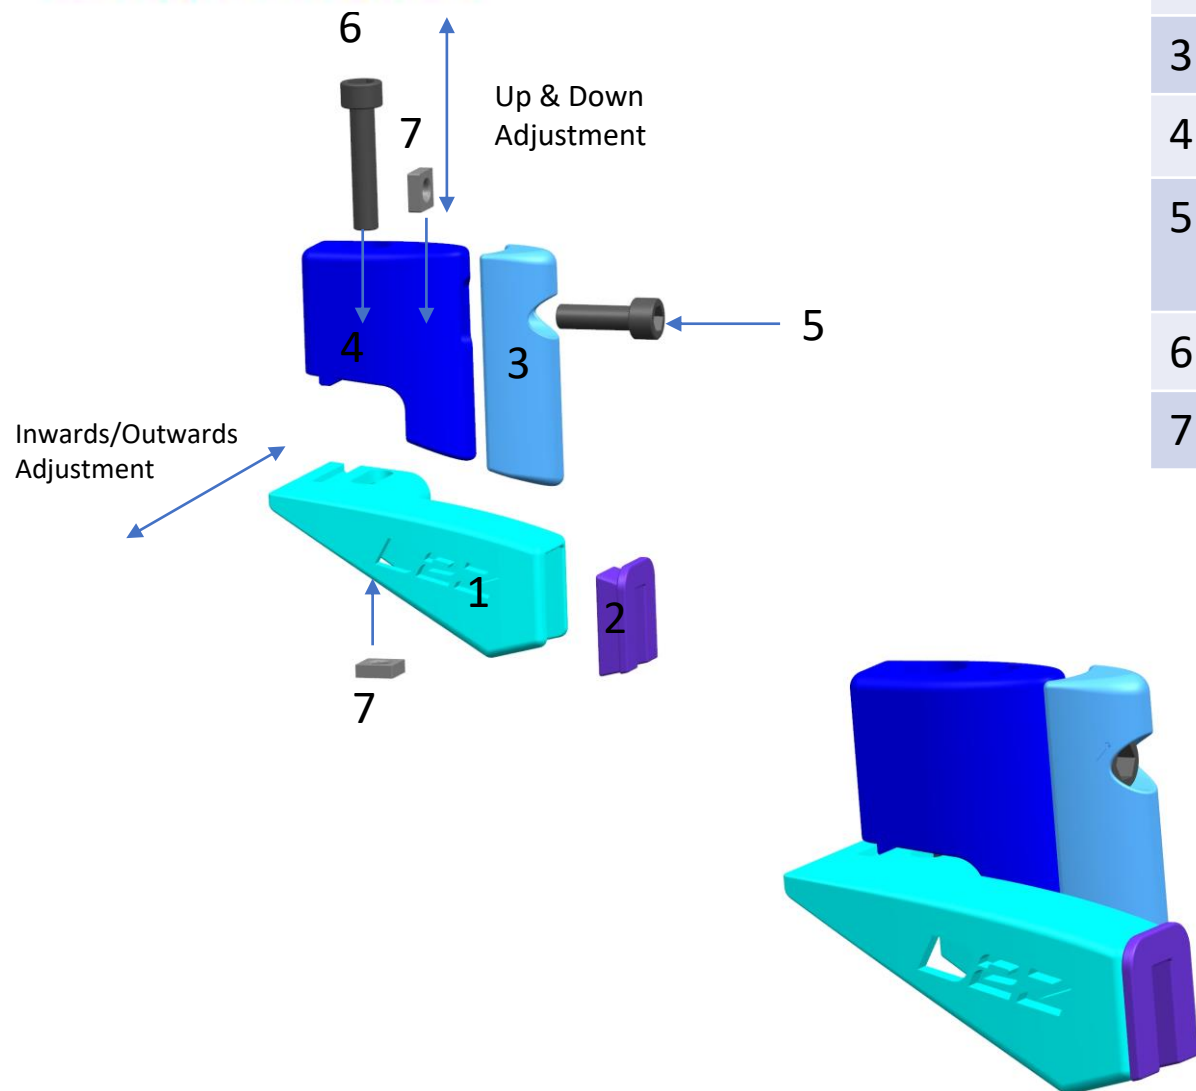

Item	Description	Quantity	
1	Chain Guide	1	
2	Alignment Setup tool	1	
3	Hangar forward mount	1	
4	Hangar Rearward Mount	1	
5	M5 x 20mm and 16mm cap head screw provided	1	
6	M5 x 25 mm cap head screw	1	
7	M5 Square nut	2	

1. Assemble on frame in approximate position leaving bolts loose.
2. Slide Inwards/Outwards and rotate to achieve correct position.
3. When close to correct position, fit the alignment tool to help get perfect alignment.
4. Tighten up bolts 5 and 6 (2Nm – if tightened too much the plastic will distort). For bolt 5 we provide 16mm and 20mm bolts. Use 16mm to start – if it does not engage use 20mm provided
5. Remove alignment tool before use.