


Installation of Shimano R671/9071 shifter
to Dual grip (D2Z-USP-0087)



You will most likely have your shimano shifter with the expander collar shown in the first picture
To use our Universal grip, you will not need the expander collar that is supplied
You will need to remove it as shown in the second picture, but you will need the bolt

1

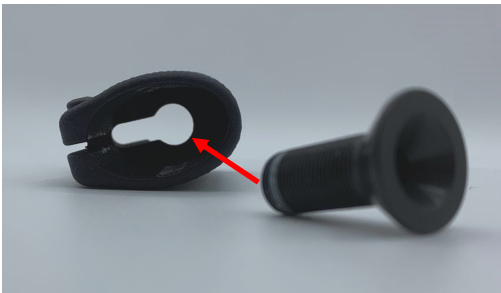

Take your expander bolt and insert it into the back of the grip through the large hole making sure it is all the way in
(Might feel tight)

2



Take your shifter apart so that there are 2 separate pieces as shown here
Put the upper part to the side for now for use later

3



With the lower section, attach it to the expander bolt in the grip
Use an allen key to tighten the bolt



4



Now with the top section of the shifter, start feeding the cable through the small lower hole of the bottom section



Make sure the cable hole on the grip and the shifter are aligned so the cable can run freely



Make sure that the cable runs freely through the grip
If so, proceed to attaching the top and bottom sections together

5

Once you have attached the top and bottom sections you are ready to fit the grip onto a pole
Push the grip firmly onto the pole making sure the whole grip is secure
Also make sure that the cable is coming out of the bottom of the pole

Tighten screw with Torx T10 to tighten grip to pole



Once finished, it should look like this