


DRAG2ZERO


44 Shimano SW-
R9150

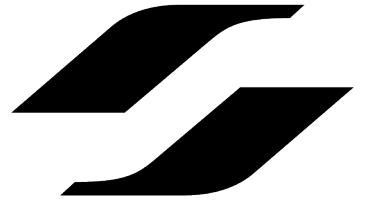

1.



2. Remove 2 screws and grip top cover.

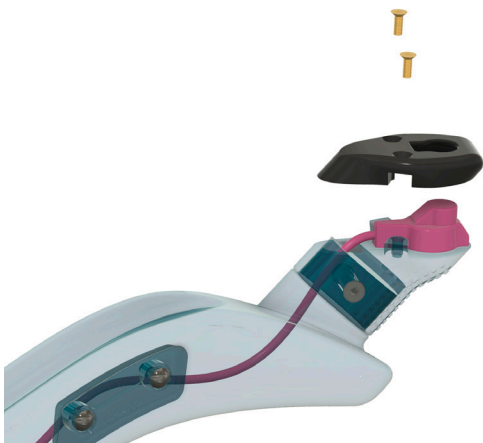

3. Thread di2 cable and SW-R9150 shifter into grip.

Depending on your cable length and extension reach you may require di2 cable extensions.

DRAG2ZERO

44 Shimano SW-
R9160



4. Assemble grip top cover back onto grip.



2. Hand tighten grip top cover screws (3Nm).



DRAG2ZERO

44 Shimano SW-
R9160

